

GETTING STARTED

When you first start using your Yepzon, plug it into a charger and if possible, charge it for two hours. This ensures that the device wakes up and has optimal performance.

A recommended precaution is to request a reset link from the **Settings**. This is a link to your e-mail that enables you to re-connect the device if for example your phone breaks or you accidentally delete the app.

In the app you should now see your Yepzon either on a list or map view and you are able to toggle between the views from the top right corner icon. List view shows current status of the device, map view shows the Yepzon on a map.

SETTINGS

In the **Settings** you are able to control the following functions:

- Set connection intervals (only available in Power Save -mode) = The device wakes up to locate at set intervals. Battery consumption depends on the settings (mode and connection intervals) and the activity of the device.
- Manage access rights = Adding and allowing more users to locate and manage the Yepzon device. Note: all users will have full access.
- Enable SOS alert sound = When making a SOS alarm, the device itself alarms.
- Edit notifications = Decide what Yepzon activity you want to be notified about.
- Turn off the Yepzon = Shuts down the device. Requires a charger plug in to wake up.

DATA USAGE

Yepzon device has a built-in SIM card and it uses mobile data to transfer positioning information to the mobile app.

Your device includes 1 month of free data to start with, after which you can easily purchase more via application **Settings** → **Purchase more data** or yepzon.com/shop. We recommend purchasing the pre-paid monthly subscription as it includes unlimited usage.

If you travel outside EU or USA, you can buy roaming through Yepzon app **Settings** → **Purchase roaming package**. Price depends on country and length of visit. Countries applicable and prices can be found on yepzon.com/roaming.

LOCATING

Yepzon Freedom uses 3G/GSM, GPS and Wi-Fi for locating. On the app you can always see the last known location based on GSM cell towers where accuracy is typically up to several kilometers.

For more accurate locating, press the Locate accurately to initiate the GPS/Wi-Fi positioning. Time required for accurate positioning depends on settings. In Quick location -mode device is constantly online and can be located instantly. In Power save -mode the connection interval -settings determine the delay to start the positioning. The longer the interval, the longer the time required to start the locating. In SOS only -mode location can be initiated only by pressing the SOS button on the device.

SOS ALERT

Pressing the SOS button in the Freedom 3 times quickly in a row initiates a SOS alert to the Yepzon App. At the same time, Freedom is obtaining accurate positioning taking place for 5 minutes or until SOS alert is acknowledged. You need to enable Yepzon notifications on your smartphone to receive notification on the alert, and sounds to hear the SOS alarm sound. SOS alert works same way in all modes.

More information at
YEPZON.COM/SUPPORT

Please read carefully the Safety and Compliance leaflet and content printed inside the packaging sleeve.
Note! Over six months of device inactivity may cause SIM card deactivation and/or battery deep discharge.

Yepzon FREEDOM - QUICK START

Android/iPhone



1

Download Yepzon App



2

Run the App and select "add Yepzon"



3

Scan the QR-code inside the pack



4

Charge your device. Ready to locate!



? www.yepzon.com